


# 01. NAME OF EACH PART

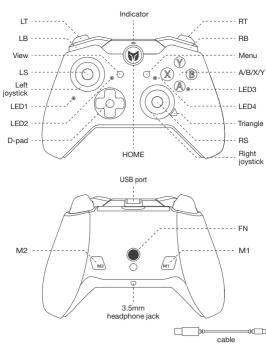

PACKAGE	BIGBIG WON RAINBOW LITE*1 / User Manual*1
CONTENTS	Qualified Certification*1 / 1.8m Ultra-light soft braided data cable*1
SUPPORTED PLATFORM	win10/11 / Switch

### 02. CONNECTION

This controller is a wired controller, so you only need to use a Type-c data cable to connect the controller to the console

Note: This controller supports Xinput and Switch modes. After connecting with the console, you need to switch to the correct mode. The default setting is Xinput. Steam: To connect to Steam, you need to check the "Xbox Configuration in the "Settings - Controller -GENERAL CONTROLLER SETTINGS" of Support Steam. Otherwise, it may cause unrecognized issues within the game Switch: After connecting the Switch, you need to turn on "System Settings -Controllers and Sensors - Pro Controller Wired Communication".

#### 03. MODE SWITCH

This controller supports two modes: Xinput and Switch. After connecting, you need to switch to the corresponding mode to use it normally. The setting method is as follows:

Hold the B+HOME button for 3 seconds until the indicator turns green, which ans switching to Xinput mode;

Hold the A+HOME button for 3 seconds until the indicator turns red, which means switching to Switch mode.

## 04. LIGHT EFFECT

This controller has a variety of built-in lighting effects. Double-click the FN button to switch or turn off the light.

#### 05. REMAP

This controller comes has two remappable back buttons and supports changing key values. The setting methods are as follows: **Remap:** Press FN + (M1/M2), and the indicator will breathe in green, indicating that

it has entered the remapping mode;

Then press the front button that needs to be mapped, and the indicator will ashes twice in green, indicating that the key mapping is successful.

Clear key value: Press and hold the "button need to cancel the key

mapping(M1/M2)", and double-click FN, and the indicator will flashes twice in green, indicating that the cancellation is success

#### **06. TURBO**

This controller supports Turbo, and the supported buttons include A/B/X/Y/LT/RT/LB/RB eight buttons. The setting methods are as follows:

et TURBO: Hold FN + the "button need to be set", the LED2,3 will flash in orange, which means it is successfully turned on. When the TURBO is triggered the LED2,3 will flashes according to the frequency of the TURBO. Cancel TURBO: Hold the "button need to cancel TURBO" and double-click the

FN button, the LED2,3 will stop flash, which means the cancellation is successful. to cycle between 5/s, 10/s, and 20/s three TURBO frequency: Hold FN + frequencies, the default is 5/s.

## 07. MACRO RECORDING

This controller supports the MACRO recording function, each set of MACRO must be bound with a remappable back button (M1/M2) as the trigge r. The buttons support recording: A/B/X/Y,  $\uparrow / \downarrow / \leftarrow / \rightarrow$ , LT/RT/LB/RB, RS/LS, and eight directions of the joystick. The setting methods are as follows:

MACRO recording: Hold FN + (M1/M2) for 3 seconds, the indicator will breather in red, indicating that it has entered the MACRO recording mode. Press the buttons of the controller to record the MACRO. After finishing the recording, clicks FN once to end the MACRO recording. The indicator will flash twice in red. During the execution of the MACRO, the four LEDs will flash from left to right until the MACRO ends

ar MACRO: Hold the "button need to cancel the macro (M1/M2)" and CI double-click FN button, the indicator will flash twice in red, indicating that the cancellation is successful.

### 08. DEADZONE OF JOYSTICK

This controller has certain deadzone in the factory default, users who want to use 0 deadzone joystick can press FN + left or right stick down (LS/RS) to change the deadzone setting in 0/10.

Note: Joystick 0 deadzone will have higher control accuracy, but also will lead to drift in the game.

## **09. HAIR TRIGGER**

This controller supports the hair trigger setting, this function can help the operation of the linear trigger be faster. The trigger set with a quick trigger will lose its 'linear Press the trigger to "on", and lift the trigger for any distance to "off". You can press the trigger again without lifting it to the original position, which can greatly optimize the speed of operation. The setting methods are as follows

On/Off Hair Trigger: Hold the Triangle button + Trigger (LT/RT), the indicator will flash twice in cyan indicating that the Hair Trigger is successfully turned on. Hold the Triangle button + Trigger (LT/RT) the indicator will flash twice in cyan again indicating thate Hair Trigger is successfully turned off.

## **10. JOYSTICKS & TRIGGERS CALIBRATION**

When the joysticks drift seriously, or they cannot be pushed to the maximum; when the triggers automatically send a key value, or they cannot reach the maximum linear value, please try calibrating the joysticks & triggers as follows:

- 1. Long press the View button+Menu buttons for 3 seconds, the four LED indicators will breathe slowly.
- 2. Push the joystick to the maximum, rotate it at a constant speed. Repeat 3-5 times.
- 3. Press the LT/RT button to the maximum and release. Repeat 3-5 times.
- 4. Press the View+Menu buttons, the LED indicator lights flash twice and then Turn off, meaning the calibration completes.

### 11. SCREENSHOT

This CONTROLLER supports one-click screenshots. In Xinput and Switch mode clicking the triangle button will be used as the screenshot button. (The screenshot file of the PC platform is saved in "This computer - Picture - Screenshot")

## **12. AUDIO**

This controller supports audio input/output. After connecting the console, you can plug the headset with a microphone into the 3.5mm audio port at the bottom of the controller. And you can set the volume by press FN+  $\uparrow$  /  $\downarrow$  . (Only on PC)

### 13. VIBRATION ADJUSTMENT

This controller supports four-speed vibration adjustment, and the setting methods are as follows:

Press FN +  $\rightarrow$ , and the vibration of the trigger motor can be cyclically switched between strong, medium, weak, and off.

# 14. RESET THE CONFIGURATION

Long press the HOME button for 10s until the controller vibrates, which means the controller reset the configuration successfully.

## 15. DETAILED FUNCTIONAL OPERATION INSTRUCTIONS

Please access "BIGBIG WON Official Website>Support" to check the instruction https://www.bigbigwon.com/support/

## **16. YOUR RIGHTS**

12-month limited warranty from the date of purchase.



#### WELCOME TO THE BIGBIGWON COMMUNITY

The BIGBIG WON community is built to connect those who seek the winning edge. Join us Discord and Follow our social channels for the latest offerings, exclusive event coverage, and opportunities to score BIGBIG WON hardware.



🛱 🗿 🎔 👌 🗗 You 🛅 @BIGBIG WON

BIGBIG WON DISCORD

# Scan the QR code to watch video tutorial

e official support page for a detailed video / FAQ / User manual / APP Downlod igbigwon.com/support



BIGBIG WON SU