 


***ARMOR-X***

 
 
## NAME OF EACH PART

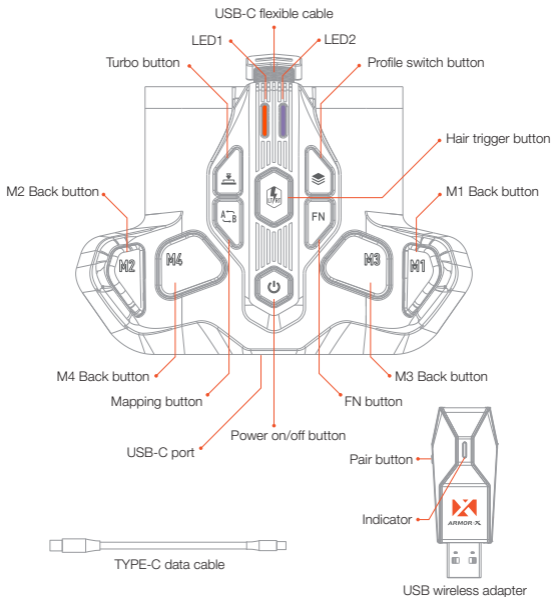

<b>PACKAGE CONTENTS</b>	BIGBIG WON ARMORX Wireless Back Button/USB Wireless Adapter TYPE-C Data Cable/User Manual/Qualified Certification
<b>SUPPORTED CONTROLLER</b>	Xbox Series Controller
<b>SUPPORTED PLATFORM</b>	Xbox Series X   S / Xbox One / Switch / Win 10/11

## ATTACH THE ARMORX

1. Remove the battery compartment cover off the Controller and attach the ARMORX to the battery compartment.
2. Plug the USB-C flexible cable of ARMORX into the USB port of the Xbox Series Controller.

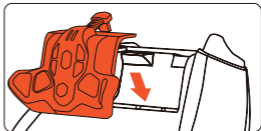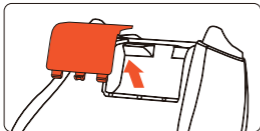

**NOTICE:** For best performance, please fully charge the ARMORX before using it for the first time. It takes about 2.5 hours to fully charge a depleted battery.

## CONNECT TO THE CONSOLE

The Xbox Series controller with ARMORX can support Xbox/ PC/ Switch originally. Hold the power button to turn on the ARMORX and plug the USB wireless adapter into the console's USB port. The ARMORX will detect the platform automatically.

- ★ LED1 slowly flashes mean that the ARMORX is connecting with the adapter. And the fast flashes mean that the ARMORX is pairing with the adapter. After the connection is successful the LED1 will become always on (The adapter indicator is same).
- ★ After the connection is successful the LED1 and adapter indicator will become always on and switch to the corresponding platform color.
- ★ LED2 flashes mean the connection between ARMORX and controller is unsuccessful and always on means connection success.
- ★ Connect with Switch console need to set: System Settings > Controllers and Sensors > Pro Controller Wired Communication On.

## WIRED CONNECTION


1. After attaching the ARMORX to the Xbox Series controller, hold the power button to turn it on.
2. Connect the Type-C port of ARMORX to the console with a Type-C cable.
3. Check the indicator lights of the ARMORX until both indicators are always on, which means the wired connection is successful.

**Note:** 3.5mm audio jack is only available under wired connection, wireless connection does not support 3.5mm audio.

## RE-PAIR



ARMORX is already paired with the adapter in the factory. The only situation you need to pair it with is that the connection of ARMORX and adapter is failed.

The steps of re-pair:

1. After the ARMORX is on, hold the  + FN until the LED1 fast flashes, the ARMORX enters pairing mode.
2. Plug the adapter into the console and hold the pair button on the adapter until the indicator fast flashes, the adapter enters the pairing mode.
3. When the LED1 and adapter indicator fast flashing means it is pairing. Please wait for it until the LED1 and adapter indicator become always on, the re-pair is successful.


## HAIR TRIGGER

After opening the hair trigger you can do the next operation without waiting for the trigger restoration. Press the trigger at any position to activate it.


1. Hold  + Left trigger(LT) the LED2 will flash in cyan twice means hair trigger open success.
  2. Hold  + Right trigger(RT) the LED2 will flash in cyan twice means hair trigger open success.
- ★ The LED2 will flashed in cyan when you press the trigger with hair trigger function.
  - ★ Double click the hair trigger button will cancel all hair trigger.

## MAPPING BUTTON

### 1. MAPPING SETTING:

Press  + (M1/M2/M3/M4) to enter the mapping mode. The LED2 will breathe in green. Then press the target button, the LED2 will flash twice. The mapping is success.

### 2. CANCEL MAPPING:

Hold the button that needs to be canceled ( M1-M4 ) and double click the , LED2 will flash twice in green means cancel success.


### 4. CANCEL ALL MAPPING:

Double click the , LED2 will flash twice in green means cancel success.


## TURBO BUTTON

THE BUTTONS SUPPORT TURBO: ABXY,D-pad, LT/RT/LB/RB, M1-M4, RS/LS.

### 1. TURBO SETTING:

Hold  + the button needs TURBO to open the TURBO function. The controller will shake for 0.2 seconds and LED2 will flash twice in orange.

### 2. CANCEL TURBO:

Hold "TURBO setted button" and double click the ; the LED2 will flash twice in orange means cancel success.

### 3. CANCEL ALL BUTTONS' TURBO:

Double click the , LED2 will flash twice in orange and all TURBO will be canceled.

### 4. CHANGE THE FREQUENCY OF TURBO:

Hold **FN** +  to change the frequency in 5/s, 10/s, 20/s

★ (The TURBO frequency won't be changed by on-board profiles).

## MACRO RECORDING

THE BUTTONS SUPPORT TURBO: ABXY,D-pad, LT/RT/LB/RB, M1-M4, RS/LS.

### 1. MACRO RECORDING:

Press **FN** + (M1/M2/M3/M4), the LED2 will breathe in red the ARMORX enters recording mode. Press the buttons on the controller after the recording is finished click once **FN** LED2 will flash twice means end recording. The LED2 will slowly flash during the MACRO is being executed.

### 2. CANCEL MACRO:

Hold the button need to be canceled (M1-M4) and double click the **FN**, LED2 will flash twice in red means cancel success.


### 3. CANCEL ALL MACRO:

Double click the **FN**, LED2 will flash twice in red means cancel success.

## ADJUSTMENT OF RUMBLE MOTOR

1. Press **FN** + ← to change the vibration intensity of trigger motor. 4 gears vibration intensity can be changed cyclically: strong, medium, weak, off.
2. Press **FN** + → to change the vibration intensity of handle motor. 4 gears vibration intensity can be changed cyclically: strong, medium, weak, off.

## ON-BOARD PROFILE

ARMORX has 3 on-board profiles can be cycle switched by click the . The color of LED1 on the left side shows different profiles.

1. Orange is the first profile.
2. Green is the second profile.
3. Blue is the third profile.

## BATTERY

The ARMORX has 1300mAh to satisfy 10 hours using. The biggest factor affecting battery life is the vibration intensity of motor. The high-frequency vibration will greatly reduce battery life.

The charging power is 5V/1A, and it will take 2 hours to fully charge.

1. Low battery: When the battery is too low, the controller will vibrate 3 times and the LED1 will flash quickly in red. It will cycle every 5 minutes.
2. Charging: When the ARMORX is charging LED1 will be always on in red. And it will be always on in green after fully charged.

## DETAILED FUNCTIONAL OPERATION INSTRUCTIONS

Please access "BIGBIG WON Official Website>Support" to check the instruction <https://www.bigbigwon.com/support/>



## Scan the QR code to watch video tutorial

Visit the official support page for a detailed video tutorial:

[www.bigbigwon.com/support](http://www.bigbigwon.com/support)

If you have any questions or issues, please submit a support request  
through the ways below:

 AMAZON Product page> Seller profile> "Ask a question"

Customer Service Address: [support@bigbigwon.com](mailto:support@bigbigwon.com)



BIGBIG WON SUPPORT

---



## WELCOME TO THE BIGBIGWON COMMUNITY

The BIGBIG WON community is built to connect those who seek the winning edge.  
Join us Discord and Follow our social channels for the latest offerings, exclusive event  
coverage, and opportunities to score BIGBIG WON hardware.



BIGBIG WON DISCORD

      @BIGBIG WON

PLAY BIG. WON BIG

© 2022 BIGBIG WON Inc. All rights reserved.  
Product may vary slightly from pictures.