

 **BIGBIG WON™**



R100 Pro

Please Note

- ★ The adapter is only compatible for the official controllers, and do not support third-party authorized or non-authorized controllers.
- ★ The adapter only supports PS4 version games on PS5.

Package Contents

R100 Pro USB Wireless Adapter

User Manual

Supported Console / System

PS5 / PS4 / Switch / Switch Lite / Windows 10

- ★ On the PS5 platform, only the PS4 version games are supported, and the PS5 version games are unsupported.
- ★ If used on the Switch Lite host, you need to purchase an OTG converter to connect.

Supported Controller

Xbox Series X|S Controller / Xbox One X|S Controller / Xbox Elite Controller Series 2 / DualSense (PS5 Controller) / DualShock (PS4 Controller) / Switch Pro Controller

 
PS: Only compatible for the official controllers, and do not support third-party authorized or non-authorized controllers.

DEVEICE LAYOUT



A PAIR Button

B Indicator

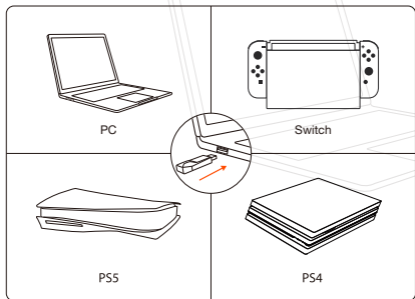

R100 Pro System Compatibility

Controller \ Platform	 DualSense	 DualShock	 Switch Pro	 Xbox Series X S Xbox One X S	 Xbox Elite Series 2
PS5	Native support	✓	✓	✓	✓
PS4	✓	Native support	✓	✓	✓
Switch Switch lite	✓	✓	Native support	✓	✓
Windows 10	✓	✓	✓	✓	✓



DualSense (PS5 controller)

DualSense (PS5 controller)

- ★ When connecting to the Switch console, you need to open "Settings> Controllers and Sensors>Wired Connection of Pro controller".
 - a. Insert the R100 Pro into the console. When the R100 Pro indicator flashes, indicating that the adapter has entered the pairing mode. And the adapter can be in pairing mode by pressing its button again.
 - b. Make sure the controller is turned off (Long press the PS button for 10s to turn it off)
 - c. Pairing mode of the controller: Press and hold the CREAT button first and then press the PS button for 5 seconds. When the controller's indicator double flashes in blue, it has entered the pairing mode.
 - d. Wait for automatic pairing: When the indicator of R100 Pro and the controller is always on, and the controller light bar is in blue, it means that the pairing has been successful.
 - e. Press the PS button again and if the controller can work normally on the host, the connection is successful.
- ★ It is recommended to repeat the above steps for re-pairing connection every time you use it to ensure the best user experience.
- ★ After pairing with the R100 Pro, if you want to reconnect to the PS5 console, please refer to the official connection method to reconnect the controller to the console.

Controllers and Sensors

TV Settings

System

Pro Controller Wired Communication

On

If this option is enabled, the Nintendo Switch Pro Controller will communicate with the console via wired communication when connected to it using the USB charging cable. The NFC touchpoint on the Pro Controller will be disabled while the controller is using wired communication.



SHARE + PS

DualShock (PS4 controller)

DualShock (PS4 controller)

- ★ When connecting to the Switch console, you need to open "Settings>Controllers and Sensors>Wired Connection of Pro controller".
 - a. Insert the R100 Pro into the console. When the R100 Pro indicator flashes, indicating that the adapter has entered the pairing mode. And the adapter can be in pairing mode by pressing its button again.
 - b. Make sure the controller is turned off (Long press the PS button for 10s to turn it off)
 - c. Pairing mode of the controller: Long press the SHARE button first and then press the PS button for 3 seconds at the same time. When the controller's indicator double flashes in white, please stop pressing, the controller has entered the pairing mode.
 - d. Wait for automatic pairing: When the indicator of R100 Pro and the controller is always on, and the controller light bar is in purple, it means that the pairing has been successful. (If the light bar is white, please reconnect till it becomes purple)
 - e. Press the PS button again and if the controller can work normally on the host, the connection is successful.
- ★ It is recommended to repeat the above steps for re-pairing connection every time you use it to ensure the best user experience.
- ★ After pairing with the R100 Pro, if you want to reconnect to the PS4 console, please refer to the official connection method to reconnect the controller to the console.

Controllers and Sensors

 
TV Settings

System

Pro Controller Wired Communication

On

If this option is enabled, the Nintendo Switch Pro Controller will communicate with the console via wired communication when connected to it using the USB charging cable. The NFC touchpoint on the Pro Controller will be disabled while the controller is using wired communication.

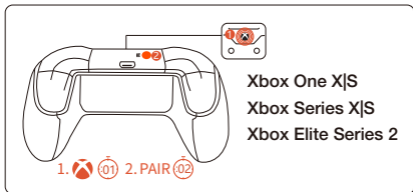

Xbox One X|S / Xbox Series X|S / Xbox Elite Series 2

- ★ When connecting to the Switch console, you need to open "Settings> Controllers and Sensors>Wired Connection of Pro controller".
- a. Insert the R100 Pro into the console. When the R100 Pro indicator flashes, indicating that the adapter has entered the pairing mode. And the adapter can be in pairing mode by pressing its button again.
- b. Long press the HOME button to turn off the controller.
- c. Pairing mode of the controller: Long press the HOME button to turn on the controller and the press the PAIR button for 2 seconds. When the controller's indicator flashes quickly, it has entered the pairing mode.
- d. Wait for automatic pairing: When the indicator of R100 Pro and the controller is always on, it means that the pairing has been successful.
- e. Press the HOME button again and if the controller can work normally on the host, the connection is successful.
- ★ It is recommended to repeat the above steps for re-pairing connection every time you use it to ensure the best user experience. The re-pairing speed and success rate of XBOX controllers are higher than the reconnecting operation.
- ★ After pairing with the R100 Pro, if you want to reconnect to the Xbox Series X|S / Xbox One console, please refer to the official connection method to reconnect the controller to the console.

Controllers and Sensors

TV Settings

System

Pro Controller Wired Communication

On

If this option is enabled, the Nintendo Switch Pro Controller will communicate with the console via wired communication when connected to it using the USB charging cable. The NFC touchpoint on the Pro Controller will be disabled while the controller is using wired communication.



Switch Pro controller

Switch Pro controller

- ★ When connecting to the Switch console, you need to open "Settings> Controllers and Sensors>Wired Connection of Pro controller".
- a. Insert the R100 Pro into the console. When the R100 Pro indicator flashes, indicating that the adapter has entered the pairing mode. And the adapter can be in pairing mode by pressing its button again.
- b. Press the PAIR button to turn off the pro controller.
- c. Pairing mode of the controller: Press the PAIR button for more than 3 seconds. When the controller's indicator is in fast cycle flashing, it has entered the pairing mode.
- d. Wait for automatic pairing: When the indicator of R100 Pro and the controller is always on, and the controller light bar is in blue, it means that the pairing has been successful.
- e. Press the HOME button again and if the controller can work normally on the host, the connection is successful.
- ★ It is recommended to repeat the above steps for re-pairing connection every time you use it to ensure the best user experience.
- ★ After pairing with the R100 Pro, if you want to reconnect to the Switch console, please refer to the official connection method to reconnect the controller to the console.



USE TUTORIAL



GET HELP WITH BIGBIG WON SUPPORT

We are here to assist you with your BIGBIG WON devices. If you have any questions, please feel free to contact us:

BIGBIG WON Official Web: www.bigbigwon.com
Customer Service: support@bigbigwon.com

PLAY BIG. WON BIG

© 2021 BIGBIG WON Inc. All rights reserved.
Product may vary slightly from pictures.