


PLAY BIG. WON BIG

©2025 BIGBIG WON Inc. All rights reserved.
Product may vary slightly from pictures.

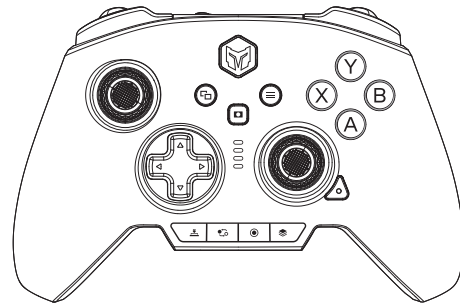

RAINBOW 3
Wireless Game Controller

PRODUCT MANUAL
产品手册 / 取扱説明書




BIGBIG WON SUPPORT

Scan the QR code to watch video tutorial

Visit the official support page for a detailed video tutorial / FAQ / User manual / APP Download
www.bigbigwon.com/support/

NAME OF EACH PART

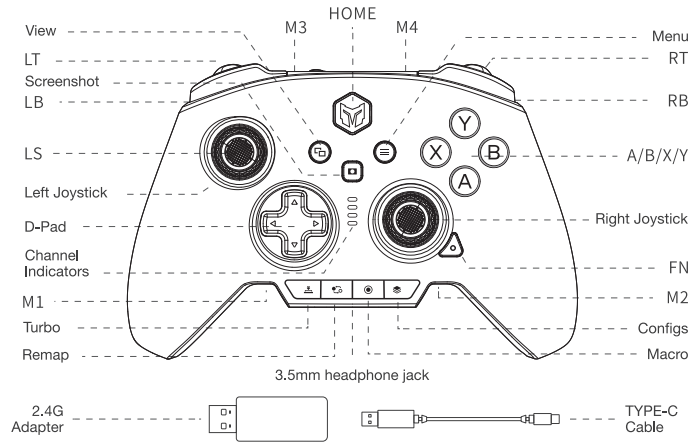

IN-THE-BOX	Rainbow 3 *1 / 2.4G Adapter *1 / User Manual *1 / USB Cable *1 / Replaceable Thumbstick*4 / Replaceable D-Pad*1 / After-sales Card *1
SUPPORTED PLATFORM	Switch / win10/11 / Android / iOS

BIGBIG WON APP

This controller can be adjusted in real time through the **MOJHON** app, or you can use the shortcut setting to adjust the parameters without using the app. With the **MOJHON** app, you can fine-tune the controller's light effects, motion control, joystick, triggers, buttons, and macros, which are richer and easier to operate within the app compared to the shortcut setting.

Download address: <https://www.bigbigwon.com/support/controller/rainbow-3-app/>

TURN ON/OFF

Press HOME button for 2 seconds to turn on/off the controller.

CONNECTION

There are three connection methods for this controllers, 2.4G connection/Bluetooth connection/wired connection. The connection methods are described as follows:

2.4G connection:

The 2.4G adapter and the controller have been paired by default, so after the controller is turned on, the connection can be completed by inserting the 2.4G adapter into the console; if it is not connected, it needs to be re-paired, the operation is as follows:

1. After the adapter is plugged into the console, press and hold the button on the adapter until the adapter indicator blinks fast, which means the adapter enters the pairing mode.
2. After the controller is turned on, press and hold the pairing button on the top, the HOME button will blinks fast, which means the adapter enters the pairing mode.
3. Wait for a few moments, both the adapter and controller's HOME button will stay on, it means the pairing is done.

Bluetooth connection:

1. After the controller is turned on, switch to the corresponding mode (xinput or switch mode), and then press and hold down the pairing button on the top for 2 seconds, the HOME button will flash fast to indicate that it enters the pairing mode.
2. To connect to Switch, go to "System Settings - Controllers and Sensors - Change Grip/Order" on your device and wait for a few moments to complete the pairing.
3. When connecting to PC and mobile phone, you need to search for the controller signal in the Bluetooth list of PC or mobile phone, the controller's Bluetooth name is Xbox Wireless Controller in Xinput mode. And in switch mode, it is called Pro controller. After finding the corresponding signal, click Connect, and wait for a moment.
4. After Bluetooth pairing, the HOME button stays on. (Which of the channel indicators lights up in Switch mode depends on the order in which the controller is plugged into the console)

Wired connection: after the controller is turned on, use the Type-C cable to connect the controller to the console.

- This controller supports both Xinput and Switch modes, the default is Xinput mode.
- Steam: It is recommended to block steam output to protect the controller's original input.
- Switch: After wired connection to switch, you need to open "Settings - Controllers and Sensor - Pro Controller Wired Connection".

MODE SWITCH

The controller supports two modes: Xinput and Switch. Before connecting, you need to switch to the corresponding mode in order to use it.

1. Press and hold the B+HOME button for 2 seconds until the HOME indicator turns green to switch to Xinput mode.
2. Press and hold the A+HOME button for 2 seconds until the HOME light turns red to switch to Switch mode.

Note: Bluetooth connection between iOS and Android platforms must be switched to Xinput mode first.

MAPPING

The controller is equipped with four remappable additional buttons and compatible with button mapping settings. The settings are as follows:

Set Mapping:

1. Press and hold the Remap button + (M1/M2/M3/M4) for 2 seconds, and the indicator of the FN button light will be in breath mode, indicating that it is in mapping mode;
2. Press the button on the front of the controller to be mapped to M1/M2/M3/M4 again and the FN indicator will flash twice to indicate that the mapping is complete.

Clear Mapping: Long press the "Button to be unmapped (M1/M2/M3/M4)" and double click the Remap button, the FN indicator will flash twice to indicate that the button's mapping has been cleared.

Clear All Mapping: Double-click the Remap button and the FN indicator will flash twice to indicate that the key change settings have been cleared for all keys.

PC Tool: The shortcut setting only supports mapping the value of the controller's buttons to the back buttons (M1/M2/M3/M4), but you can modify all the buttons of the controller with the PC tool.

TURBO

This controller supports setting turbo, and the supported buttons include A/B/X/Y、↑/↓/←/→、LT/RT/LB/RB、M1/M2/M3/M4 a total of sixteen buttons, and the settings are as follows:

Setting Turbos: Press and hold Turbo button + "button to be set", the FN indicator will flash twice, which means it is turned on successfully.

- When the turbo is triggered, the FN indicator will flash according to the turbo frequency.

Clear Single Turbo: Press and hold the "button to cancel turbo", double click the Turbo button, the FN indicator light will flash twice, it means the turbo setting of this button has been cleared.

Clear All Turbo: Double click the turbo button, the FN indicator blinks twice to indicate that the turbo settings for all buttons have been cleared.

Turbo Frequency: Press and hold FN + ← to cycle between 5/s, 10/s and 20/s, default is 5/s.

- PC Tool: After downloading the PC Tool, you can set the turbo setting for all buttons of the controller.

MACRO RECORDING

The controller supports recording macros, each set of macros must be bound to an additional button (M1/M2/M3/M4) as a trigger; the buttons supported for recording are A/B/X/Y、↑/↓/←/→、LB/RB/LT/RT、LS/RS, and the eight directions of the joystick. The settings are as follows:

1. Press and hold the Macro button + (M1/M2/M3/M4) for 3 seconds, the FN indicator will enter the breathing mode, which means the controller is ready to record macro.
2. Press any controller button to start recording, click the Macro button when recording is complete, and the FN indicator will flash twice to end the recording.

- While the macro is running, the FN indicator is in slow blink mode until the macro is finished.

To clear a single macro: press and hold the "button (M1/M2/M3/M4) to cancel macro", then double click the macro button, the FN indicator will flash twice, indicating that the macro of the current button has been cleared.

Clear all macros: Double-click the Macro button, the FN indicator will blink twice to indicate that the macros of all buttons have been cleared.

- Shortcut settings are only available for basic macro functions. After downloading PC Tool, you can edit macros down to the duration and interval of each step. Moreover, PC Tool can store multiple sets of macros and generate macro libraries for instant selection and application.

SIMULATED MOTION CONTROL

This controller supports Simulated Motion Control, which can use the built-in gyroscope to simulate the data of the left and right joysticks, so as to realize the motion control of the game.

- This function requires different parameters to be adjusted according to different games for a better experience, so it can only be turned on within the APP.

ON-BOARD CONFIGS

Switch mode:

1. First click the Configs button so that the channel indicator changes from red to white, indicating that the configuration can now be switched. The four indicators in this mode represent four different on-board configurations.
2. Click the Configs button again to switch configurations, and the indicators will switch in a top-down order, with the first indicator being on for the first on-board configuration, and so on.
3. If the configuration is not switched within 5s, it will be automatically exited and the indicator will change from white to red to indicate the channel again.

Xinput Mode: No channels are indicated in this mode, so the indicator lights default to white, indicating which set of on-board configurations is currently in use. Clicking the Configs button in this mode will directly switch to the next set of configurations.

Reset Configuration: Press and hold the Configs button for 3 seconds to clear all settings for the current configuration slot.

DEADZONE OF JOYSTICK

The default setting of this controller has a certain amount of joystick dead zone, users who have the need for 0 dead zone can press FN + press down left OR right joysticks (LS/RS) to switch the 0/10 dead zone of the left and right joysticks respectively.

- Note: If the joystick has 0 deadzone, it means higher control precision, but it will also lead to joystick drift in games with no deadzone.
- The default second set of configurations is a 0 deadzone joystick configuration.

JOYSTICK CALIBRATION

When the joystick drifts severely, cannot be pushed to the maximum value, you can try to calibrate the joystick as follows:

1. Press and hold View+Menu at the same time for 3 seconds, the left and right light bands will be in orange breathing mode at the same time, which represents entering calibration mode.
2. Push the joystick to the limit and turn it in a circle at an even speed, repeat 3-5 times.
3. Finally, press the View and Menu at the same time, the left and right light bands will double flash and then go out, which means the calibration is completed.

GYROSCOPE CALIBRATION

When the handle appears gyroscope drift, you can try to calibrate the gyroscope, the operation is as follows.

1. Place the joystick on a horizontal desktop and press Menu+Screenshot at the same time, the left and right light bands will enter purple breathing mode at the same time, which means that it enters the calibration mode.
2. Wait a few moments for the left and right light bands to turn purple and blink twice to indicate that calibration is complete.

VOLUME ADJUSTMENT

You can adjust the volume of the PC by pressing FN + ↑ / ↓ .

VIBRATION CONTROL

The vibration motor can be turned on and off by pressing FN + →.

●PC Tool: The shortcut settings only control the vibration on and off. After downloading the PC Tool, you can also adjust the start/maximum intensity of the vibration by using it.

BATTERY

When the battery power drops below 50%, the vibration will be forcibly turned off. When the battery power drops below 10%, a low battery prompt will be given. The red breathing light will prompt for 15 seconds, once every 5 minutes, and the light will be forcibly turned off. After being connected to the power supply, the decorative lights on both sides light up and the vibration returns to normal.

RESET

If the controller is misconfigured or functions abnormally, you can try to reset the controller to recover, the operation is as follows:

Long press the HOME button for 10s until the controller vibrates, which means the controller is finished resetting.

WARRANTY

12-month limited warranty from the date of purchase.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2AYJK-RAINBOW3



WELCOME TO THE BIGBIGWON COMMUNITY

The BIGBIG WON community is built to connect those who seek the winning edge. Join us Discord and Follow our social channels for the latest offerings, exclusive event coverage, and opportunities to score BIGBIG WON hardware.



BIGBIG WON DISCORD




官网支持中心

视频教程、APP, 请扫码获取

我们将在这里为您提供墨将产品的支持与服务：视频教程、升级工具、电子说明书、FAQ
<https://www.bigbigwon.cn/support/>

部件示意

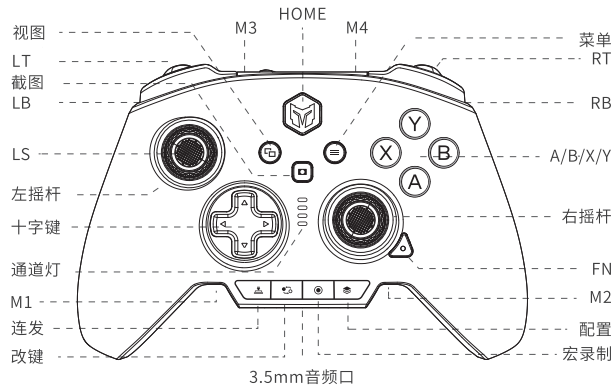

2.4G 接收器



TYPE-C
数据线

包装清单	彩虹 3 *1 / 接收器 *1 / 说明书 *1 / 数据线 *1/ 可换摇杆帽 *4/ 圆盘十字键帽 *1/ 售后卡片 *1
支持平台	Switch / win10/11 / Android/iOS

墨将助手APP

本手柄支持墨将助手APP实时调参,也可以脱离APP使用快捷设定调参。使用墨将助手APP,可对手柄的灯效、模拟体感、摇杆、扳机、按键、宏进行精细化调整,相比快捷设定,拥有更丰富的功能以及更清晰的可视化操作,同时可存储多套手柄参数配置并生成配置列表,方便即时应用。

下载地址:<https://www.bigbigwon.cn/support/controller/rainbow-3-app/>

开/关机

长按HOME键 2 秒,可对手柄进行开/关机操作。

连接

本手柄一共有三种连接方式,2.4G连接/蓝牙连接/有线连接,连接方式如下:

2.4G 连接

2.4G接收器与手柄在出厂前已完成配对,因此手柄开机后,将2.4G接收器插入主机即可完成连接;若发现连接不成功,则需要重新配对,操作方式如下:

1. 接收器插入主机后,按住接收器上的按钮,直到接收器指示灯快闪,代表接收器进入配对状态。
2. 手柄开机后,长按顶部的配对键 2 秒,HOME灯快闪,代表进入配对状态。
3. 等待片刻,接收器与手柄HOME灯均长亮,代表重新配对成功。

蓝牙连接:

1. 手柄开机后,切换到对应的模式(xinput 或 switch 模式),然后长按顶部配对键 2 秒,HOME 灯快闪代表进入配对状态。
2. 连接 Switch 需在主机上进入“设置—控制器与传感器—连接新设备”,等待片刻即可完成配对。
3. 连接 PC 与手机则需在 PC 或手机的蓝牙列表搜索手柄信号,Xinput 模式下手柄蓝牙名为 Xbox wireless controller,switch 模式下为 Pro controller,找到对应的信号后点击连接,等待片刻即可。
4. 蓝牙配对成功后,HOME 指示灯长亮。(Switch模式下通道指示灯哪一颗亮起取决于手柄在主机是第几个接入的手柄)

有线连接:

- 手柄开机后,使用Type-c数据线将控制器与主机连接即可。
- 本手柄支持Xinput与Switch两种模式,默认为Xinput模式。
 - Steam平台:建议屏蔽 steam 输出,保障手柄原生输入。
 - Switch平台:有线连接switch后,需打开“设置-手柄与感应器-Pro手柄有线连接”。

模式切换

本手柄支持Switch与Xinput两种模式,切换到对应的模式之后才能与主机连接,设定方式如下:

1. 长按B+HOME键 2 秒,直到 HOME 指示灯变为绿色,代表切换到Xinput模式;
2. 长按A+HOME键 2 秒,直到 HOME 指示灯变为红色,代表切换到Switch模式。

注意:蓝牙连接iOS与Android平台,须切换到Xinput模式下。

映射

本手柄附带两颗扩展背键 (M1/M2) 与两颗扩展肩键 (M3/M4)，且支持改键设定，设定方式如下：

设置映射：

1. 按下映射键 + (M1/M2/M3/M4)，FN指示灯呼吸，表示进入改键状态；
2. 再次按下需要映射到M1/M2/M3/M4的正面按键，FN指示灯双闪，表示改键成功。

清除映射：按住“所需取消改键的按键 (M1/M2/M3/M4)”，双击映射键，FN指示灯双闪，表示已清除当前按键的改键设置。

清除所有映射：直接双击映射键，FN指示灯双闪，表示已清除所有按键的改键设置。

- 快捷设定仅支持将手柄的键值映射到扩展键(M1/M2/M3/M4)上，下载墨将助手之后则可以通过墨将助手对手柄的所有按键进行键值修改。

连发

本手柄支持按键连发设定，支持的按键包括A/B/X/Y、↑/↓/←/→、LB/RB/LT/RT、M1/M2/M3/M4共十六颗按键，设定方式如下：

设置连发：按住连发键 + “所需设定的按键”，FN指示灯双闪，代表开启成功。

- 连发运行过程中，FN指示灯将以当前连发频率闪烁

清除单个连发：按住“所需取消连发的按键”，双击连发键，FN指示灯双闪，表示已清除当前按键的连发设置。

清除所有连发：直接双击连发键，FN指示灯双闪，表示已清除所有按键的连发设置。

连发频率：按住 FN +← 可以在5/s、10/s、20/s三档频率之间循环切换，默认为5/s。

- 下载墨将助手之后可以通过墨将助手对手柄的所有按键进行可视化的连发设定。

宏录制

本手柄支持宏录制功能，每套宏须绑定一颗扩展键(M1/M2/M3/M4)作为触发开关；支持录制的按键有A/B/X/Y、↑/↓/←/→、LB/RB/LT/RT、L摇杆键/R摇杆键、摇杆八方向，设定方式如下：

录制宏：

1. 长按宏录制键 + (M1/M2/M3/M4) 3秒，FN指示灯呼吸，表示进入宏录制状态。
2. 按手柄按键进行宏录制，待录制完成后单击 宏录制键，FN指示灯双闪，代表结束录制。

- 宏运行过程中，FN指示灯将呈慢闪状态，直到宏运行结束

清除单个宏：

按住“所需取消宏的按键 (M1/M2/M3/M4)”，双击 宏录制键，FN指示灯 双闪，表示已清除当前按键的宏设置。

清除所有宏：

直接双击宏录制键，FN指示灯双闪，表示已清除所有按键的宏设置。

- 快捷设定仅支持大概的宏录制功能，下载墨将助手之后可以通过墨将助手对宏进行编辑，精细到每一步的持续时间，间隔时长；同时墨将助手可以储存多套宏并生成宏库，即时选择应用。

模拟体感

本手柄支持模拟体感，可使用内置的陀螺仪来模拟左右摇杆的数据，从而达到对游戏的体感控制。

- 该功能需根据游戏的配置来调节不同的参数，以获取更好的体验，所以仅可在 APP 内开启。

板载配置切换

Switch模式：

1. 先单击配置键,使通道指示灯由红色变为白色,代表进入配置切换模式。此模式下的四颗指示灯分别代表四套不同的板载配置；
2. 再次单击配置键则开始对配置进行切换,指示灯将以自上而下的顺序进行切换,第几颗指示灯亮起代表当前处在第几套板载配置；
3. 5s内无配置切换行为,将自动退出配置切换模式,指示灯由白色变为红色,重新指示通道。

Xinput模式：

该模式下无通道指示功能,因此指示灯默认就为白色,指示当前所在的板载配置。此模式下单击配置键即可直接对配置进行切换。

重置配置:长按配置键3秒,清除当前配置档位的所有设置。

摇杆死区

本手柄出厂默认设置了一定的摇杆死区,有需求的用户可以在墨将助手内对左右摇杆的中心死区进行单独设置,或点击 FN+左/右摇杆下压来切换为 0 死区；

- 摇杆0死区将拥有更高的控制精度,但同时也会导致在无死区的游戏里会出现漂移的现象。
- 默认第二套配置为 0 死区摇杆配置。

摇杆校准

当出现摇杆严重漂移、推不到最大值时,可以尝试校准摇杆,操作方式如下：

1. 同时长按 视图键+菜单键 3秒,左右装饰灯同时橙色呼吸,代表进入校准模式。
2. 将摇杆推至极限值并匀速转圈,重复3-5次。
3. 最后同时按下 视图键和菜单键,左右装饰灯双闪后熄灭,代表校准完成。

陀螺仪校准

当手柄出现陀螺仪漂移时,可尝试校准陀螺仪,操作方式如下：

1. 将手柄静置于水平桌面上,同时按手柄的菜单键+截图键,左右装饰灯同时紫色呼吸,代表进入校准模式。
2. 等待片刻,待左右装饰灯紫色双闪,就代表校准完成。

音量控制

本手柄支持 PC 平台音量控制,按 FN + ↑/↓ ,可对PC平台音量大小进行音量调节。

振动控制

本手柄支持振动控制,可通过 FN + → 来一键开启与关闭振动马达。

- 快捷设定仅支持控制振动的开启与关闭,下载墨将助手之后,还可以通过墨将助手对振动的起始/最大振动强度进行分别调节。

电池说明

在电池电量低于50%时强制关闭震动，电量低于10%时低电量提示，红色呼吸灯提示15s，每5分钟提示一次，并且强制关闭灯光。接入电源后，两侧装饰灯点亮，震动恢复正常。

详细功能操作说明

请访问官网查阅视频教程:墨将官网》支持页面

<https://www.bigbigwon.cn/support>

您的权益

从购买产品之日起享受12个月有限质量保证

联系我们微信公众号:墨将BIGBIG WON服务,可获取免费在线技术支持

售后事项

1. 若商品有质量问题,请首先联系我们的客服进行登记。
2. 如需退、换商品,请确保商品完好无损(包括商品外包装、附赠品、说明书、售后卡标签等),不影响二次销售。
3. 如要保修商品,请务必完整填写用户姓名、联系电话、联系地址,正确填选售后要求与详细说明售后原因,将售后卡随货寄回(如不完整填写保修卡信息,恕无法提供任何售后服务)。

充电底座功能:

接入电源:灯光橙色长亮3s,若无手柄接入,则缓慢熄灭

充电中:橙色灯光常亮;若充电过程中拿走手柄,则灯光长亮3秒后缓慢熄灭。

充满:橙色灯光长亮1分钟后熄灭;若充满后立即拿走手柄,则灯光长亮3秒后缓慢熄灭。

注意事项

- 内含细小零件。请务必放在3岁以下儿童触及不到的地方。若不慎吞食或吸入,请立即就医。
- 请勿靠近火源使用产品。
- 请勿将产品暴露于阳光直射或高温的环境中。
- 请勿将产品置于潮湿或多尘的环境中。
- 请勿撞击产品或使其跌落。
- 请勿直接接触USB端口,否则可能会导致故障。
- 请勿用力弯曲或拉扯线缆。
- 请使用柔软的干布清洗。
- 请勿使用汽油或稀释剂等化学品。
- 请勿自行拆卸、修理或改装。
- 请勿将产品用于原本设计用途以外的用途。对于非原本用途而造成的事故或损坏,我们概不负责。
- 请勿直视光束。它可能会伤害你的眼睛。
- 如果您有任何有关产品质量的问题或建议,请联系我们或您当地的经销商。

保修卡	
(售后政策:非人为损坏,三个月包换、一年保修)	
用户姓名	
联系电话	
联系地址	
售后要求	☐ 退 ☐ 换 ☐ 保修
售后原因	
订单编号	
(注:非墨将官网途径购买的产品,售后问题请直接与购买商家联系)	



BIGBIG WON 公式LINEアカウントへようこそ

皆様により情報を届け、より日本地域のサービスを向上できるように、BIGBIGWONは公式LINEアカウントを開設致します。最新のセール情報、クーポンなどが貰えます。BIGBIGWONのユーザーでしたらぜひお友達を追加してください!



BIGBIGWON公式LINEアカウント




公式サイトサポートセンター

QRコードをスキャンしてビデオチュートリアルをご覧ください

公式サポートページへ、詳しいビデオチュートリアルをご覧ください
<https://jp.bigbigwon.com/suppor/>

各部の名称

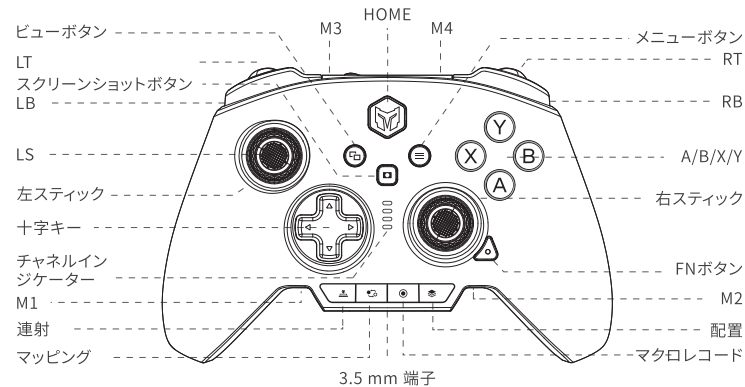

2.4Gアダプター



TYPE-C
ケーブル

パッケージ内容	RAINBOW 3*1/ 2.4Gアダプター *1 / 取扱説明書*1 / アフターサービスカード*1 / 交換可能なサムスティック / 八方向十字キーキャップ / USB Type-C ケーブル *1
互換性	Switch / win10・11 / Android/iOS

PCツールのダウンロード

このコントローラーは、スマホアプリでリアルタイムのパラメータ調整することができ、アプリを使用せずクイックセッティングすることもできます。アプリを使用すれば、コントローラーのライティング、アナログスティックのデッドゾーンの調整、ビジュアルマクロの編集、モーションエイムパラメータの調整、ポーリングレートの調整、振動レベルの設定など、クイックセッティングよりさらに豊富な機能をカスタマイズすることができます。同時に、コントローラーの配置をセーブして配置リストを作成することができ、簡単に切り替えることもできます。

ダウンロードアドレス: <https://jp.bigbigwon.com/support/controller/rainbow-3-app/>

電源オン/オフ

ホームボタンを2秒長押しして、電源をオン／オフすることができます。

接続

このコントローラーは、2.4G無線接続/Bluetooth接続/有線接続の3つの接続方法があります。接続方法は以下となります：

2.4G接続: 2.4Gアダプターは出荷する際にコントローラーとペアリングしました。そのため、コントローラーをオンにして、2.4Gアダプターをコンソールに挿入したら接続が完了します。もし接続が失敗しましたら、再度のペアリング

が必要です。操作方法は以下となります：

- 1、アダプターをコンソールに挿入し、アダプターにあるペアリングボタンをインジケータが素早く点滅するまで長押しして、アダプターがペアリング状態に入ったことを示す。
- 2、コントローラーをオンにした後、トップにあるペアリングボタンを2秒間長押しし、HOMEボタンのインジケータがすばやく点滅すると、ペアリング状態に入ったことを示す。
- 3、しばらく待って、コントローラーのHOMEボタンのインジケータとアダプターのインジケータが常時点灯したら、ペアリングが成功したことを示す。

Bluetooth接続:

- 1、コントローラーをオンにした後、対応モードに切り替えて（xinputもしくはswitchモード）トップにあるペアリングボタンを2秒間長押しして、HOMEボタンのインジケータがすばやく点滅すると、ペアリング状態に入ったことを示す。
- 2、Switchに接続するは、Switchで「設定→コントローラーとセンサー→新しい設備に接続」を選択し、しばらく待てばペアリングが完了します。
- 3、PCやスマホに接続する際には、Bluetoothリストでコンソールでコントローラーの信号を検索し、接続を選択してください。Xinputモードの場合、Bluetooth名はXbox wireless controllerとなります；Switchモードの場合、Bluetooth名はPro controllerとなります。
- 4、Bluetoothペアリングが成功しましたら、HOMEボタンのインジケータが常時点灯になります。（Switchモードでは、何番目に接続されたコントローラーを何番目のチャンネルインジケータが点灯しているを決めます）

有線接続: Type-cケーブルを使ってコントローラーとコンソールを接続すれば結構です。

- ・このコントローラーはSwitchモードとXinputモード2つのモードに対応し、デフォルトはXinputモードです。
- ・Steam: Steam出力を無効化することをおすすめします。
- ・Switch: 有線接続にした後、Switchで「設定→コントローラーとセンサー→Proコントローラー有線接続」を選択してください。

モードの切り替え

このコントローラーはSwitchモードとXinputモード2つのモードに対応し、対応しているモードに切り替えてからコンソールに接続できます。切り替える方法は以下となります：

- 1、B+ホームボタンを2秒間長押しして、ホームボタンのインジケータが緑に変わるとXinputモードに切り替えます。
- 2、A+ホームボタンを2秒間長押しして、ホームボタンのインジケータが赤に変わるとSwitchモードに切り替えます。

ご注意：BluetoothでIOSとAndroidに接続するには、Xinputモードに切り替えてください。

マッピング

このコントローラーは2つのバックボタン(M1/M2)と2つのトップボタン(M3/M4)を搭載し、マッピングを設定することが可能です。設定方法は以下となります：

リマッピングを設定：

- 1、マッピングボタン+(M1/M2/M3/M4)を押して、FNインジケータがオレンジにブリージングするとマッピング状態になります。
- 2、M1/M2/M3/M4にリマッピングしたい前面ボタンを押して、FNインジケータがオレンジにダブル点滅すると、リマッピングが成功したことを示します。

リマッピング解除：リマッピングを解除するボタン(M1/M2/M3/M4)を押しながらFNをダブルクリックして、FNインジケータがオレンジにダブル点滅すると、このボタンのマッピング設定が正常に解除されたことを示します。

すべてのリマッピングを解除：マッピングボタンをダブルクリックして、FNインジケータがダブル点滅すると、すべてのリマッピングが解除されたことを示す。

- ・クリック設定は他のボタンをバックボタン(M1/M2/M3/M4)にリマッピングするのみ対応します。アプリを使用すれば、すべてのボタンをマッピングすることができます。

連射機能

このコントローラーは、A/B/X/Y、↑/↓/←/→、LT/RT/LB/RB、M1/M2/M3/M4、計16個のボタンに連射を設定することができます。設定方法は次の通りです：

連射機能設定：連射ボタン+「設定したいボタン」を押して、FNインジケータがダブル点滅したら、正常にオンになったことを示します。

- ・連射機能が起動されたら、FN インジケータは連射の頻度に応じて点滅します。

連射機能解除：「連射を解除するボタン」を押しながら連射ボタンをダブルクリックして、FNインジケータがダブル点滅すると、このボタンの連射設定が成功に解除されたことを示します。

連射頻度：FN +←を長押しして連射頻度を5/s、10/s、20/sの中に切り替えられます。デフォルトは5/sになります。

- ・アプリで設定するなら、さらにわかりやすく連射機能を設定することができます。

マクロレコーディング

このコントローラはマクロレコーディング機能をサポートしています。各セットのマクロはスイッチとして1つのバックボタン(M1/M2/M3/M4)をバインドする必要があります。レコーディングに対応するボタンはA/B/X/Y、↑/↓/←/→、LB/RB/LT/RT、Lスティックボタン/Rスティックボタン、スティックの8方向です。設定方法は以下の通りです：

マクロレコーディング

- 1、マクロボタン+(M1/M2/M3/M4)を3秒間長押しして、FNインジケータがブリージングすると、マクロレコーディング状態に入ったことを示します。

- 2、コントローラボタンを押してマクロレコーディングを行い、レコーディングが完了したらマクロボタンをクリックして、FNインジケータがダブル点滅すると、レコーディングが終了したことを示します。

- ・マクロがレコーディングしている時、FNインジケータはレコーディングが終了するまでブリージングします。

マクロを解除:「マクロを解除したいボタン(M1/M2/M3/M4)」を押しながらマクロボタンをダブルクリックして、FNインジケータがダブル点滅すると、このボタンのマクロ設定が成功に解除されたことを示します。

すべてのマクロを解除:マクロボタンをダブルクリックして、FNインジケータがダブル点滅すると、すべてのボタンのマクロ設定が成功に解除されたことを示します。

- ・クリック設定は、簡単なマクロレコードしか対応していません。アプリでは、各ステップの持続時間、間隔時間まで細かくマクロを編集することができます。同時に、アプリで複数のマクロセットを保存し、マクロライブラリを生成し、即座に応用することができます。

モーションエイム機能

このコントローラは、模擬体感をサポートし、内蔵ジャイロセンサーを使用して左右のスティックの入力をシミュレートして、ゲームの体感コントロールを実現することができます。

- ・この機能はゲームごとに設定する必要がありますので、アプリでご確認してください。

オンボード設定の切り替え

Switchモード:

- 1、まず、配置ボタンをクリックして、チャンネルインジケータが赤から白に変わると、配置の切り替えモードに入ったことを示す。このモードにおいて4つのインジケータは、それぞれ4つの異なるオンボード配置を示します。

- 2、配置ボタンをもう一度クリックすると、配置の切り替えが開始されます。インジケータは上から切り替えられます。何番

目のインジケータが点灯していると、現在何番目のオンボード配置になっているを示します。

3、5s間に配置の切り替えがないと、配置切り替えモードが自動的に終了し、インジケータが白から赤に変わり、チャンネルを表示します。

Xinputモード:このモードではチャンネル表示機能がないのため、インジケータが白になり、現在のオンボード配置を示します。このモードでは、配置ボタンをクリックすると配置を切り替えることができます。

配置のリセット:配置ボタンを3秒間長押しして、現在の配置をすべて削除することができます。

デッドゾーンの調整

このコントローラは工場出荷時に一定のデッドゾーンが設定されており、デッドゾーン0に設置したいならアプリ設定することができます、もしくはFN+左右アナログスティックの下押し(LS/RS)を押してデッドゾーン0に切り替えることができます。

- ・アナログスティックをデッドゾーン0に設置したら、より高いコントロール精度を提供しますが、デッドスペースのないゲームでドリフト現象が発生する場合がございます。

- ・デフォルトは2番目の配置がデッドゾーン0の配置になります。

スティックのキャリブレーション

アナログスティックひどくドリフトしている、最大値まで押せない場合、次のようにスティックをキャリブレーションしてみてください:

- 1、ビューボタン+メニューボタンを同時に3秒間長押しして、左右のライティングがオレンジにブリージングすると、キャリブレーション状態に入ったことを示します。

2、アナログスティックを最大限まで押して一定速度で3〜5回を回転させる。

3、最後、ビューボタンとメニューボタンを同時に押して、左右のライティングがダブル点滅した後消灯したら、キャリブレーションが完了したと示す。

ジャイロセンサーのキャリブレーション

コントローラーのジャイロがドリフトしている場合は、次のようにジャイロをキャリブレーションしてみてください：

1、水平な机の上にコントローラーを置いて、メニューボタン+スクリーンショットボタンを同時に押して、左右のライティングが同時に紫色にブリージングすると、キャリブレーションモードに入ったことを示します。

2、しばらく待って、左右のライティングが紫色にダブル点滅すると、キャリブレーションが完了したことを示します。

音量調整

このコントローラーは振動コントロール機能に対応し、FN+→で振動をオン・オフすることができます。

・クリック設定は、振動のオンオフ制御しかできません。アプリで振動の開始/終了、振動の強さを設定することができます。

バッテリーについて

バッテリー残量が50%以下の時は強制的に振働を消し、10%以下の時は低電量を知らせ、赤い呼吸灯は15sを知らせ、5分ごとに1回知らせ、強制的にライトを消します。電源を入れると、サイドランプが点灯し、振動が正常に戻ります。

リセット

コントローラーの設定や機能に異常がある場合は、次のようにコントローラーをリセットしてみてください：ホームボタンを10秒間長押しして、コントローラーが振動するとコントローラーのリセットが成功したことを示します。

ご權益

12ヵ月のメーカー限定保証。